



Schematics for Tracker MC/RH

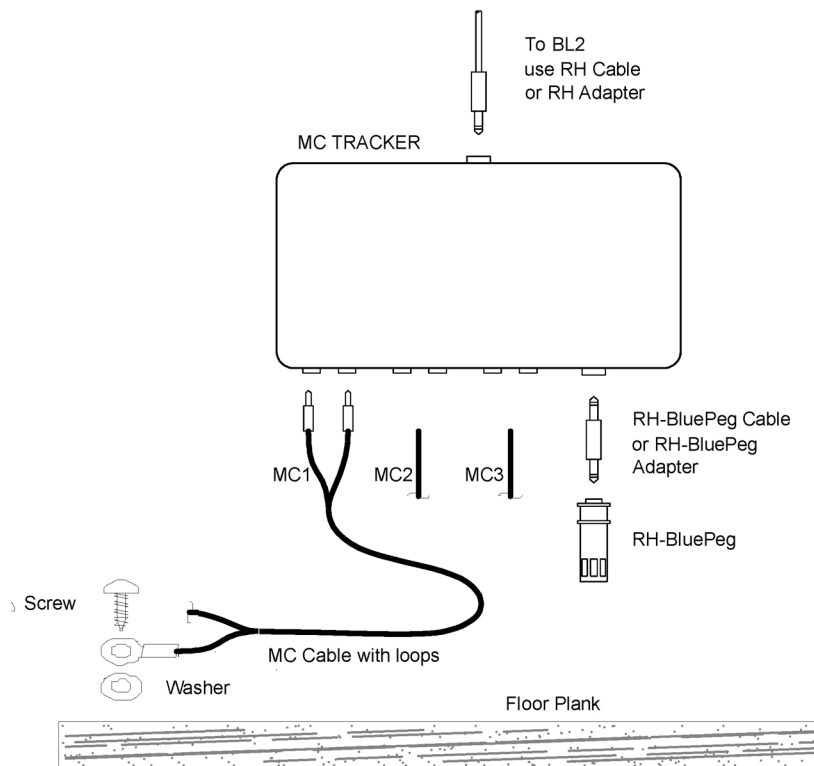

Operation:

- Download the software
- Set the wood group at the Settings drop down window
- Set the time intervals
- Place the wood screws 1" - 1 1/4" apart (3cm)
- Connect cables as shown in diagram
- If more species or material corrections are needed contact Lignomat.

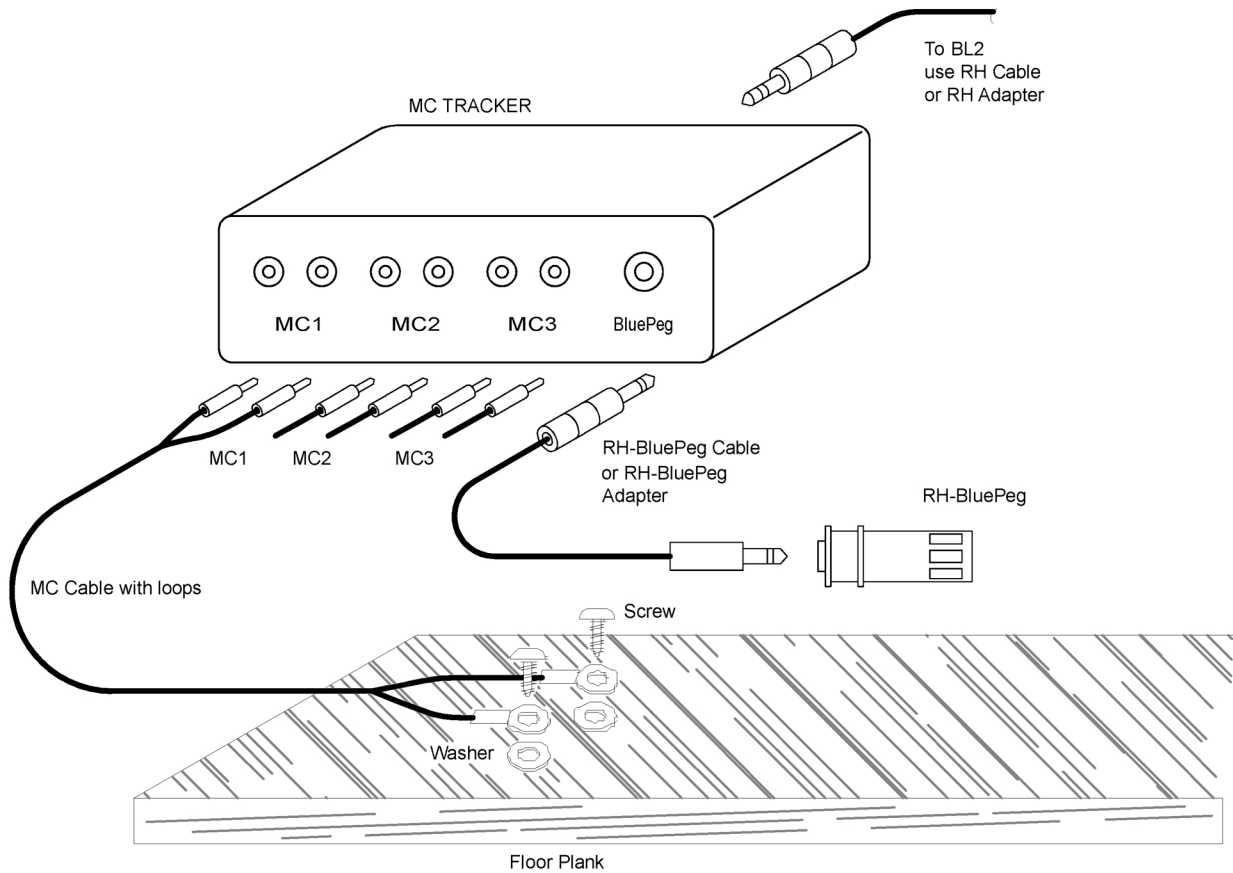

Questions? Call 1-800-227-2105

Lignomat USA Ltd - 14345 NE Morris Ct. Portland OR 97230
 www.Lignomat.com Email: sales@lignomat.com