

## Wood Species Corrections for Tracker MC/RH with BL2

EMC	Fir Pine	Particle Brd Duraflake Strd
Wood Group 1	Goiabao	Particle Brd Strd
Wood Group 2	Goncalo Alves	Particle Brd Vesta
Wood Group 3	Guatambu	Pau-marfim
Wood Group 4	Gypsum	Pau-mulato
Acapu	Hemlock	Pau-rosa
Alder	Hevea	Ponderosa Pine
Ash	Hickory	Poplar
Aspen	Ipe	Radiata Pine
Ballote	Jatob	Ramin
Basswood	Keruing	Red Cedar
Beech	Koa	Redwood
Cedar	Lauan	Rosadinho
Ceiba	Lodgepole Pine	Southern Yellow Pine
Ceororama	Mahogany	SPF
Cherry	Mahogany (Honduras)	Spruce
Courbaril	Maple	Sugar Pine
Cumaru	Meranti	Teak
Cupressus	Northern Red Oak	Walnut
Curopica	P. taeda	White Oak
Douglas Fir	P. taeda (immature)	Zebrawood
Eastern Pine	Particle Brd Duraflake	
White	Fireproof	

### How to Set Wood Species for BL2

After installing Lignomat's BL2 software, start the program from the BL2 icon and the BL2 window (empty) will appear. Connect BL2 to PC with USB cable and click Detect and Read. Serial number is now listed on BL2 window, indicating the BL2 is connected to the PC. Set parameters for the new test. To choose wood species, click Settings and select wood species from drop down list for MC1, MC2, MC3. See User Instructions for BL2 and Tracker #2 and #3.

When you are downloading measurements, make sure you check "Settings" for MC1, MC2, MC3 **before clicking Detect and Read**. See instructions for BL2 and Tracker #5.